

## Signal Strength

There is a new feature I have added, this is Signal strength. When the Enterprise is in standby mode it will flash:

C1-number

The number is the signal strength. Here is what the number represents:



1. Greater than 0 less than 10
2. Greater than 9 less than 12
3. Greater than 11 less than 15
4. Greater than 14 less than 18
5. Greater than 17 less than 21
6. Greater than 20 less than 24
7. Greater than 23 less than 27
8. Greater than 26 less than 29
9. Greater than 28 less than 35

